



SARIN
ENERGY SOLUTIONS



UVC Sterilizing Wireless Charger

Ultraviolet Disinfection Light Kills 99.9%
of Viruses, Bacteria, Fungi & More

UVC Sterilizing Wireless Charger







Disinfect in 3-10 min




The Centers for Disease Control and Prevention (CDC) recommends a UV lamp intensity of $40 \mu\text{W}/\text{cm}^2$ at the center of the work area to ensure surface decontamination.

UVC Sterilizing Wireless Charger

#10993 SES-UVCPH

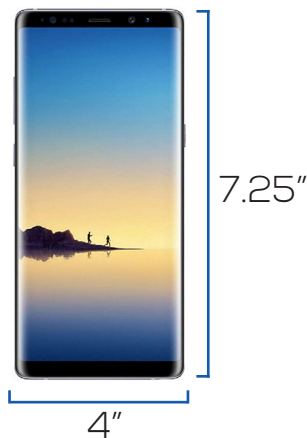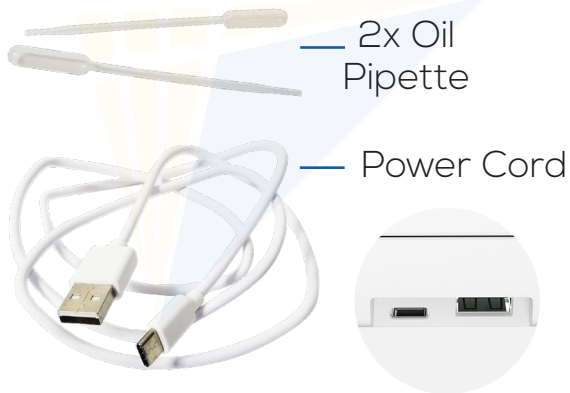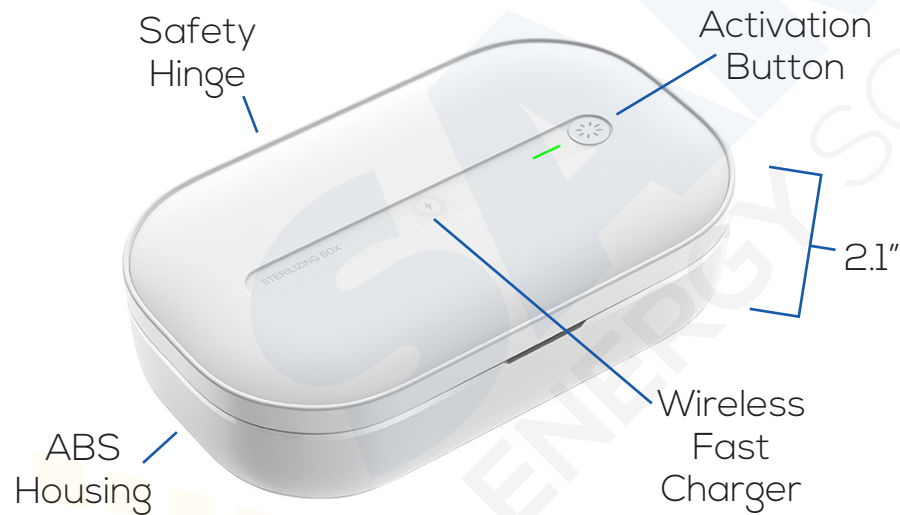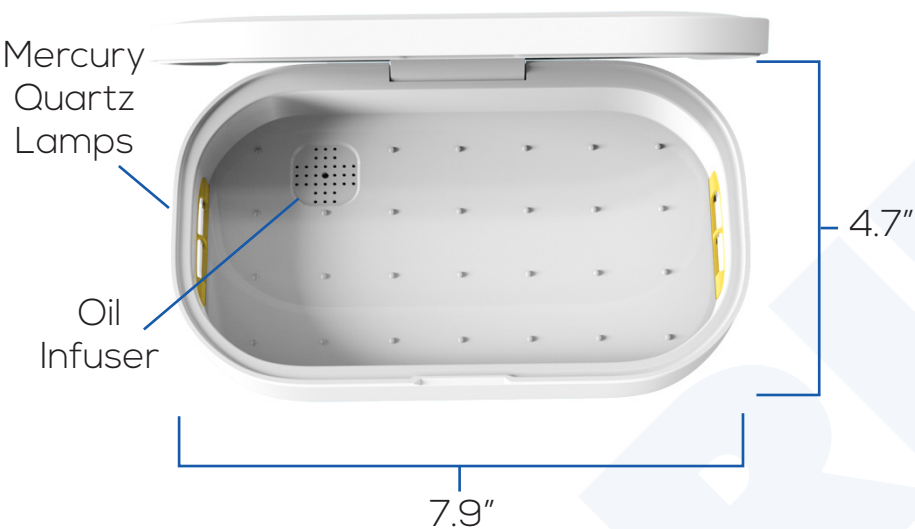


UVC Kills

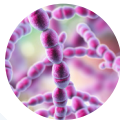

Viruses




Bacteria

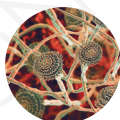


Fungi




Mold



Yeast



Algae



Amoebas



Allergens

FEATURES

1. Clinically proven to eliminate 99.9% of all viruses, bacteria, fungi, mold, yeast, algae, amoebas, and other germs and allergens within seconds of 253.7 nm UVC exposure.
2. Safety mechanism temporarily deactivates the device if the lid is opened during use.
3. The top of the unit acts as a wireless fast charger. Can be used while disinfecting below.
4. Ozone is produced to permeate into cracks and crevices for more effective sterilization.
5. Contact-free disinfection reduces the chance of human error and cross-contamination.
6. Reduces the need to buy and handle corrosive cleaners. (Does not replace soap/water)

SPECIFICATIONS



Model:	UVC Sterilizing Fast Charger
Size:	7.9"(L) x 4.7"(W) x 2.1"(D) 13.2 oz
Power:	2W Light, 10W Charge
Voltage:	DC5V 2A, DC9V 2A
UV Strength:	$\geq 2,100 \mu\text{W}/\text{cm}^2$
UV Wavelength:	253.7 nm & 185 nm (Ozone)
UVC Lamp:	Mercury Quartz
Bonus Features:	Ozone, Aromatic Oil Infuser
Bulb Lifespan:	$\geq 8,000$ hours
Wireless Charge:	WPC1.2.4_Qi
Included:	Dropper x2, 3.3' USB-C Cord



TIPS & SAFETY

- To maximize effectiveness, ensure the object to be disinfected is uncovered
- After use you can smell ozone vapor, it is harmless in small doses but should not be intentionally or repeatedly inhaled
- Avoid UVC exposure to skin and eyes
- Be sure the lid is closed before use
- If the lamp breaks use a wet paper towel to clean up, and do not inhale
- Do not soak in liquid (small drops are fine)
- Do not add more than 3 drops of oil
- Do not use perfume containing alcohol, it may damage silicone devices
- Skin oils can damage the bulb, don't touch

INSTRUCTIONS

Plug the device into a USB port and place it on a dry table. Once the red light is on, the wireless charge function is active. If you choose to, add aromatherapy oil before your object.

Indicator	Mode
Red Light	Charging
Green Light	3 min cycle
Blue Light	10 min cycle
Yellow Light	3 min & charge
Purple Light	10 min & charge

Manual Operation:

1. If a red light does not turn on when plugged in, ensure that the cable is properly connected.
2. Press the button once to run a 3 minute cycle.
3. Press the button a second time to run a 10 min cycle.
4. At any point a wireless charging capable mobile phone can be placed on top to be recharged.
5. To cancel the operation hold the button for 5 seconds.

Safety Switch: If the lid is opened at any point during the disinfection process the device will temporarily deactivate, and then once the lid is closed again it will continue the previous mode.